


# Choose your pattern, make your own sewing!

HZL-HT710

With Automatic Thread Trimmer



**60** Sewing Patterns

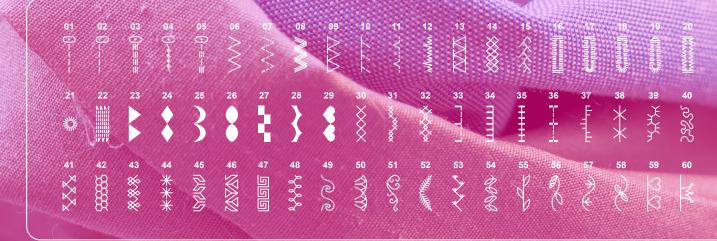

## **Sew Comfortably!**

#### Start/Stop Button




[Green] Ready to start or

while sewing [Red]

Not ready to start

The color of the start/stop button indicates the status of the machine.



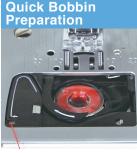


The bobbin preparation is easy. Just follow the guide and it is not necessary to pull up the bobbin thread.

# **Auto Needle** Threader



 The needle threader easily threads the needle and allows you to start sewing quickly.

#### Lock Stitch/ Pattern Completion Lock Stitch



You can locking stitch(3 stitches) just by pressing the button at the beginning or end of sewing. If you press the button while sewing a pattern, the machine stops after sewing one cycle of the pattern.

### **Sew Firm!**



Press the button to change up/down position of needle instantly. Also you can change needle stop position and can even sew a half stitch.

#### **Presser Foot Pressure**



When sewing thin or thick fabrics. you can get comfortable feed.

# **Buttonhole**

HZL-HT710 sews the buttonhole automatically according to the size of the button.

# 

#### HZL-HT710

#### SPECIFICATIONS

Sewing Speed: 70 - 800 sti/min

**Needle**: #9 - #16

Dimensions: 425(W)×300(H)×170(D)mm Weight (machine only): 5.9kg

#### Other Features

- Free Arm Drop-in Bobbin Drop Feed
- Easy to Start Sewing Thick Fabrics
- Button Sewing Reverse Button LED Lighting


#### **Accessories**

 


- A: Standard Presser Foot B: Zipper Foot C: Satin Stitch Foot D: Overcasting Foot
- E: Blind Hem Foot F: Button Sewing Foot G: Buttonhole Foot
- H: Seam Ripper/Brush I: Screwdriver (L & S) J: Second Spool Pin K: Pack of Needles (3x) L: Edge/Quilting Guide M: Spool Holder (L & S)
- N: Spool Pin Felt O: Stitch Pattern Plate Clip P: Bobbin (3x)
- Option: Wide Table

## Easy to Use!

#### Size of Stitch Pattern and Needle Position

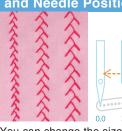



#### **Foot Controller with Needle Up and Down Feature**



You can quickly press one step on the foot controller to change the needle position go up or down into the fabric.

# **Stitch Pattern Plate**





#### **JUKI CORPORATION**

2-11-1, TSURUMAKI, TAMA-SHI, TOKYO 206-8551, JAPAN https://www.juki.co.jp

JUKI AMERICA, INC.

4220 West 104th Street, Suite 1A Hialeah, FL 33018 http://www.juki.com E-mail: home@juki.com

